


Updating Logger info in LM3:

1- In the logger screen select a Administrator user. Press and hold the start button. Input password 1234

2- In the Settings screen Press “Calibrate”

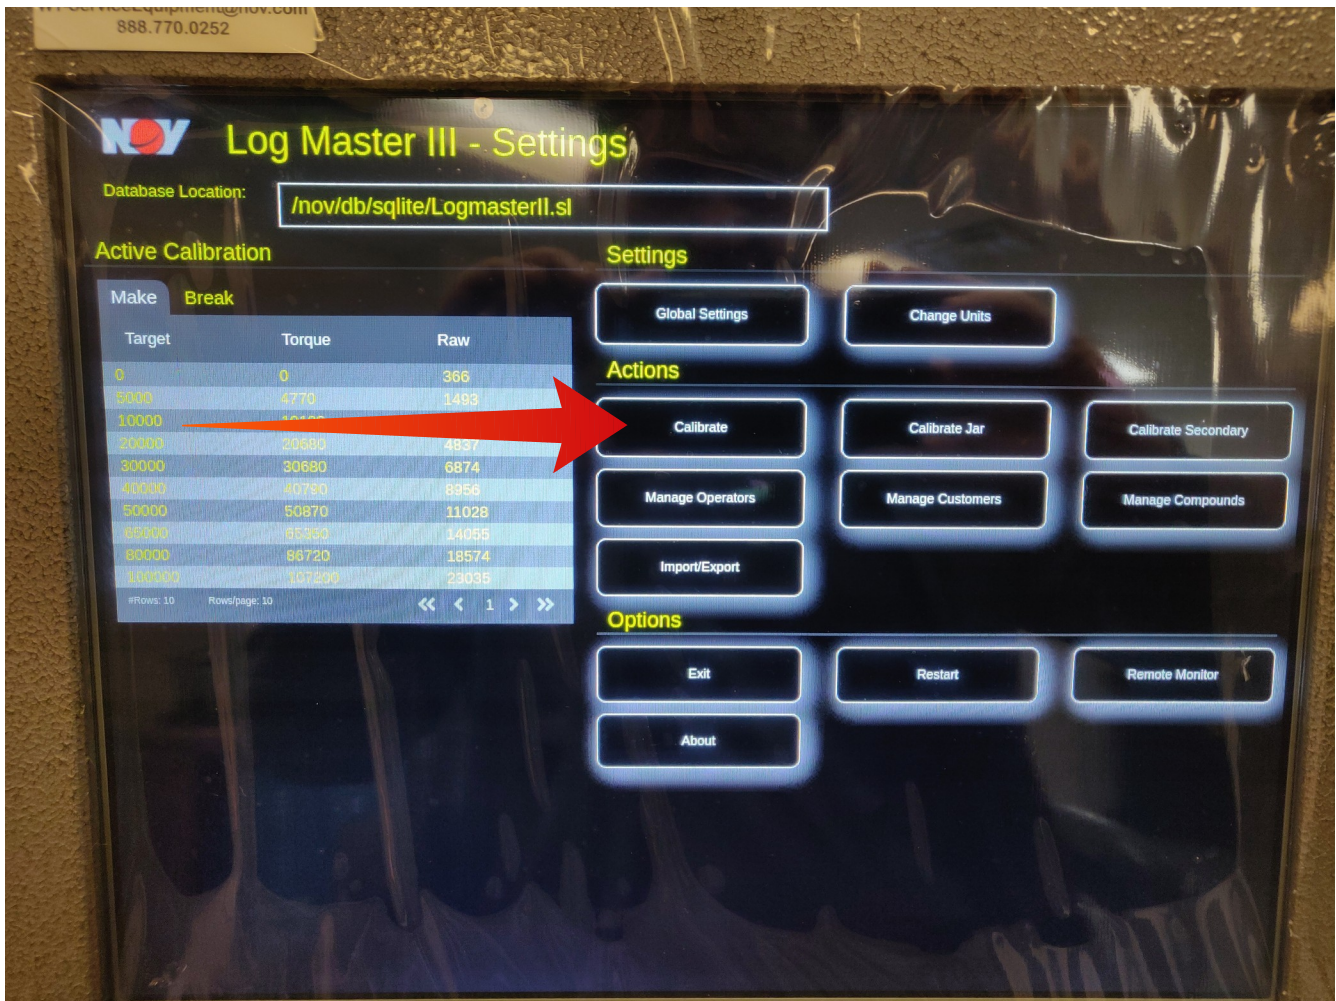

3 – Press “Save and Exit” in the “Calibration” screen



4- Fill the missing information in: TorqueMaster S/N, Console S/N and Logger S.N

5- Check the Liability checkbox

6 Save

& Reboot the computer



Log Master III - Calibration Report Data

Calibration Report Data

Technician Name NOV Administrator	
Customer Name DEFAULT	
WO Number DEFAULT	PO Number DEFAULT
Console S/N xxxxxxxx	TorqueMaster S/N xxxxxxxx
Torque Transducer Type DEFAULT	TorqueLogger S/N varco-cExpress-SL
Torque Trans Capacity DEFAULT	Make Trans S/N DEFAULT
Torque Trans S/N DEFAULT	Break Trans S/N DEFAULT



CALIBRATION LIABILITY

National Oilwell Varco is not responsible for any loss of data, or liable for any other harm that may result from any unauthorized modifications or recalibrations made to the LogMasterIII™ tool by a user. Do you accept responsibility for this calibration?

Cancel

Finish